

# **LP9 850** Free Standing Dishwasher for 14 place settings and third tray for cutlery











ECO function

MultiFlex-3, wtih flexible cutlery tray

Extra Dry function

SmartSensor

**DESCRIPTION** 

Free Standing Dishwasher for 14 place settings and third tray for cutlery  $% \left( 1\right) =\left( 1\right) \left( 1\right) +\left( 1\right) \left( 1\right) \left( 1\right) +\left( 1\right) \left( 1\right) \left( 1\right) \left( 1\right) +\left( 1\right) \left( 1$ 

LIFE STYLE

Maestro

**COLOURS** 



**REFERENCE** 

REF. 40782501 EAN. 8421152153758



#### **FEATURES**

Free-standing dishwasher

Electronic control panel with display

Place settings: 14

Multifunctional third cutlery basket

Third sprayer

Washing programs: 8

Washing temperatures: 40°, 45°, 50°, 55°, 60°, 65°C

Dual Half load

Fast program 30 minutes

Eco Program

Full AquaStop safety system Delay timer 1-24 hours


Adjustable upper basket (push-up)

Energy Class: A+++/A Noise level: 44 dBA



### **DIMENSIONS**

Product height (mm): 845 Product width (mm): 598 Product depth (mm): 610 Product length (mm): Net weight (Kg): 45,5

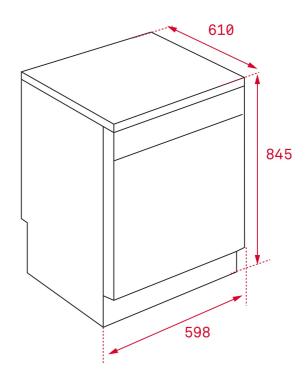

## **TECHNICAL DETAILS**

**FITTING MEASURES** 

Maximum door height (mm): 707

Door width (mm): 587

**PRODUCT SHEET** 

**Capacity (Place Settings):** 14

Energy consumption (kWh/year): 237 Power consumption (Kwh): 0,83 Water consumption (litres/year): 2800

Water consumption (litres): 10

**Standard program:** ECO

Standard cycle duration (minutes): 220

Noise level (dB): 44

Certificates: GS/CE/EMC/Rohs

**POWER SUPPLY** 

Frequency (Hz): 50 Power rate (V): 220-240 Power rate (W): 1760-2100

Plug type: EU

**Maximum Nominal Power (W):** 2100

**FEATURES** 

Type of installation: Free standing Control panel: Electronic buttons Control panel display: Yes Number of programs: 8

Number Of Washing Temperatures: 6

Aqua-Logic: Yes Water softener: Yes Microfilter: Yes

**SAFETY SYSTEMS** 

Internal Leakage Control: Yes

Aquastop: Yes

**CONTROL INDICATOR LIGHTS** 

Low Salt Aid indicator: Yes Low Rinse Aid indicator: Yes Selected program indicator: Yes

Remaining time: Yes

**End of program acoustic alarm:** Yes **End of program visual alarm:** Yes

**SPECIAL FUNCTIONS** 

**Soak/Prewash program:** Yes **Economic program:** Yes

Alternative wash (Zone Wash): Yes Delayed Timer (h): 1-24 hours

**EQUIPMENT** 

3rd Basket: Yes
3rd sprayer: Yes



#### **ENERGY LABEL**

